

SENTINEL™

THE REALISTIC ELECTRONIC VIGIL CANDLE

Model 10D4

Installation Instructions

No Tools Required

BATTERY INSTALLATION (battery compartment located at bottom of candle)

1

Hold candle in one hand and locate the circular locking nut underneath the candle base (fig 1A)

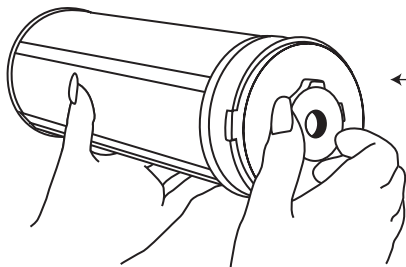


FIG. 1A

2

Turn locking nut counter-clockwise until it clears threaded bolt (fig 2A). Locking nut should turn freely after it releases from threaded bolt.

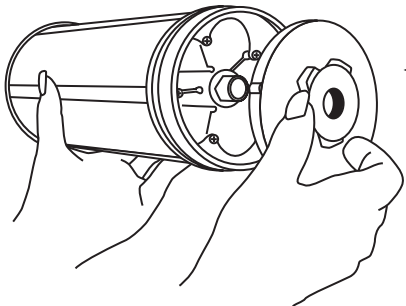


FIG. 2A

3

Grasp locking nut firmly and pull off threaded bolt (fig 3A). Locking nut is attached to battery cover plate.

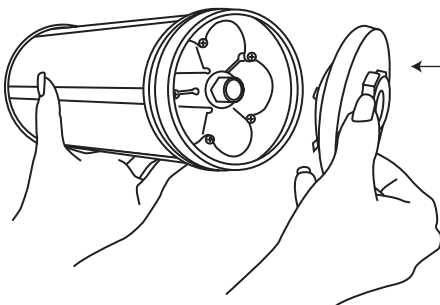


FIG. 3A

4

Two "D" size batteries are minimum requirement to operate Sentinel Candle. Insert batteries into battery compartment making sure that the positive (+) position is inserted first (fig 4A). Two batteries will allow candle to burn continuously for approximately 400 hours depending on temperature conditions. Each addition of two batteries will add 400 hours burning time. A total compliment of ten batteries will provide 2000 hours of continual burn time.

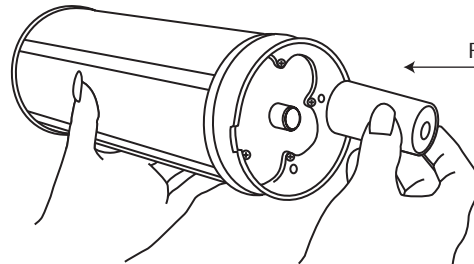


FIG. 4A

5

Replace battery cover plate. Please note battery cover plate must key correctly into candle base (fig 5A). Turn locking nut clockwise onto threaded bolt until it cannot advance any further. Do not over tighten (fig 5B).

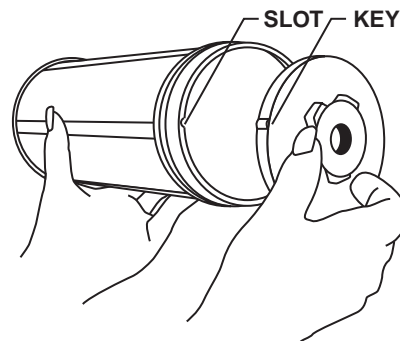


FIG. 5A

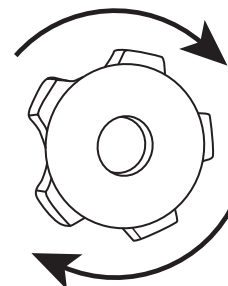


FIG. 5B